

Read and understand all instructions in the Operator's Manual.

How to Cook with Programmed Recipes

Before you begin

Make sure:


- The oven is preheated.
- Your food is prepared and ready to cook.

Procedure


To cook using a programmed recipe, do the following.

Step	Action
------	--------


1. **Touch** the recipes icon ①. The Browse recipes screen displays.

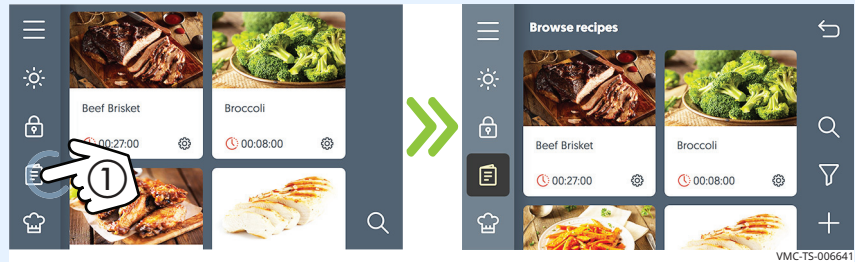

2. **Navigate** to the recipe.
Touch the recipe ②.
Touch the start icon ③.

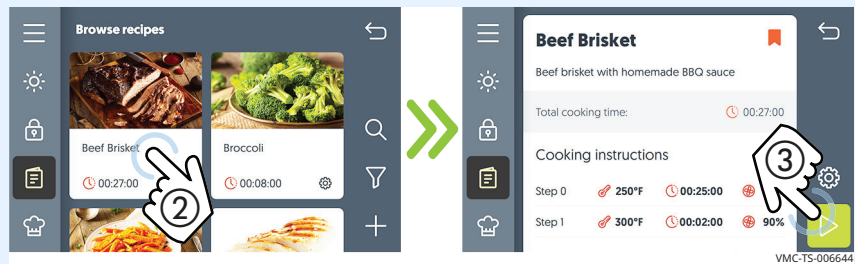

3. **Select** the chamber ④.
Open the door and load the food into the chamber. **Close** the door.
Touch the start icon ⑤.

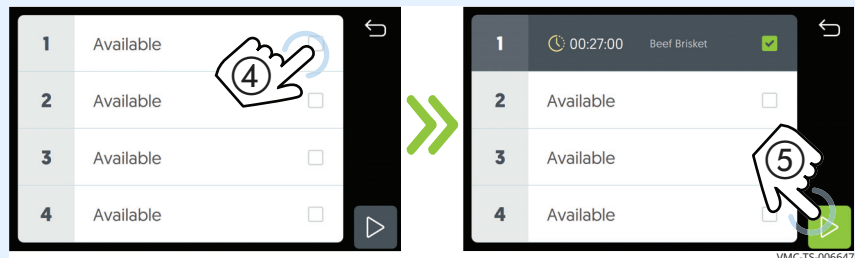


Quick Start Guide


Vector Multi-Cook Oven H Series

During the cooking process

The cooking status screen displays the details on the current cook setting.

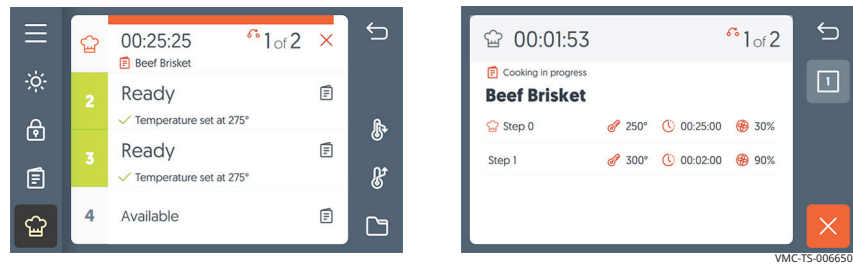

During the cooking process:

Action	Result
Touch the hand icon  when action is required,	to continue the cooking process.
Touch the chamber,	to show the recipe details.
Touch and hold the chamber number,	to show the current chamber temperature.

Result

At the end of the cooking process, the oven sounds an alert and the chamber light and door handle flashes. The Cooking done screen displays.